

INSTRUCTIONS

We're here to help 866-558-5706Hrs: M-F 9am to 5pm EST

For Assembling and Installing Fixtures in Canada Pour L'assemblage et L'installation Au Canada


- TURN OFF POWER.
 IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done. Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" 1) a)
- b)
- Unscrew the fuse(s), or switch "OFF" the circuit breaker switch(s), that control the power to the fixture or room that you are working on.

 Place the wall switch in the "OFF" position. If the fixture c)
- d) to be replaced has a switch or pull chain, place those in the "OFF" position.
- 2) Find the appropriate threaded holes on mounting strap.
- Assemble mounting screws into threaded holes.

 Attach mounting strap to outlet box. Mounting strap can be 3) adjusted to suit position of fixture.
- 4) Make wire connections. Reference chart below for correct connections and wire accordingly.


Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

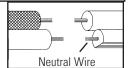

- 5) Carefully push wire connections back into outlet box making sure all connections remain secure.
- 6) Push fixture to wall, carefully passing mounting screws through holes.
- Screw threaded balls onto mounting screws. Tighten
- threaded balls to secure fixture to wall. Insert recommended bulbs (Not included). Sockets are ac-8) cessible through glass door. To open glass door, raise latch up and pull.

- INSTRUCTIONS FOR MOUNTING
 FIXTURE OUTDOORS AND/OR IN WET LOCATIONS.
 Mounting surface should be clean, dry, flat and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- With silicone caulking compound, caulk completely around where back of canopy meets the wall surface to prevent water from seeping into outlet box.

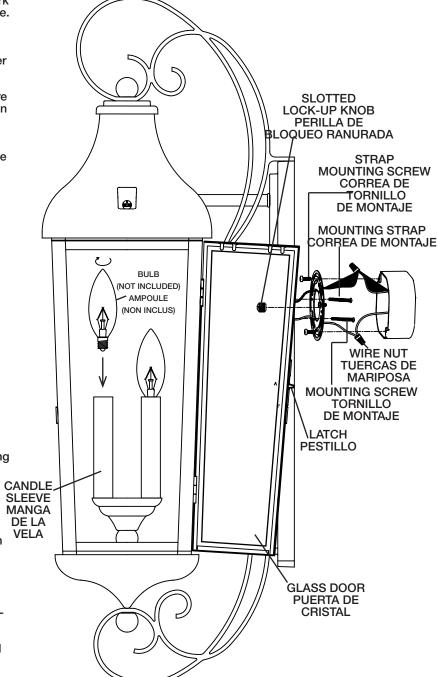

SEE OTHER SIDE FOR CANADIAN FRENCH TRANS-LATIONS.

VOIR L'AUTRE CÔTÉ POUR LES CANADIENS TRA-DUCTIONS EN FRANÇAIS.

Date Issued: 04/13/16 IS-49738-CB


Hrs: M-F 9am to 5pm EST

For Assembling and Installing Fixtures in Canada Pour L'assemblage et L'installation Au Canada

- COUPER LE COURANT.
 IMPORTANT: TOUJOURS couper le courant avant de a) com mencer le travail.
- Localiser le coffret à fusibles ou le disjoncteur du b) domicile. Mettre l'interrupteur principal en position
- Dévisser le ou les fusibles (ou mettre le disjoncteur sur c) Arrêt) qui contrôlent l'alimentation vers le luminaire ou la pièce dans laquelle le travail est effectué.
- Mettre l'interrupteur mural en position d'Arrêt. Si le luminaire à remplacer est doté d'un interrupteur ou d'une chaîne con nectée à l'interrupteur, placer ces élé d) ments en position d'Arrêt.
- Trouver les trous filetés appropriés sur l'étrier de montage. Visser les vis de montage dans les trous 2) taraudés.
- Fixer l'étrier de montage sur la boîte à prises. L'étrier de montage peut être réglé en fonction de la position du 3)
- Établir les branchements des fils. Se reporter au tableau cidessous pour les connexions appropriées et acheminer les fils selon les instructions.


Connecter le fil noir ou rouge de la boite	Connecter le fil blanc de la boîte
A Noir	A Blanc
*Au cordon parallèle (rond et lisse)	*Au cordon parallele (à angles droits el strié)
Au bransparent, doré, marron, ou noir sans fil distinctif	Au transparent, doré, marron, ou noir avec un til distinctif
Fil isolé (sauf fil vert) avec conducteur en cuivre	Fil isolé (sauf fil vert) avec conducteur en argent

*Remarque: Avec emploi d'un fil paralléle (SPT I et SPT II). Le fil neutre est á angles droits ou strié et l'autre fil doit étre rond ou lisse (Voir le schéma).

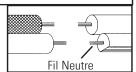

- Replacer soigneusement les fils dans la boîte à prises en 5) veillant à ce que les connexions ne soient pas déconnec-
- Visser les boules de blocage filetées sur les vis de fixation. Serrer les boules de blocage pour fixer le luminaire au pla-6)
- Visser les boules filetées sur les vis de montage. Serrer les boules filetées pour fixer le luminaire au mur. 7) CANDLE
- Insérez des ampoules recommandées (non inclus). Prises sont accessibles par l'intermédiaire de porte en verre. Pour ouvrir la porte en verre, soulever le loquet et

- INSTRUCTIONS DE MONTAGE DE LUMINAIRE À L'EXTÉRIEUR ET/OU DANS DES LIEUX HUMIDES. La surface de montage doit être propre, sèche, plate et de 0,6 cm plus épaisse que le couvercle sur tous les côtés. Tout écart entre la surface de montage et le cache dépas-şant de 0,5 cm doit être rectifié selon les besoins.
- À l'aide de matériaux d'étanchéité à la silicone, calfeutrer bien autour où l'arrière du couvercle entre en contact avec le mur pour empêcher l'eau de passer dans la boîte à prises.

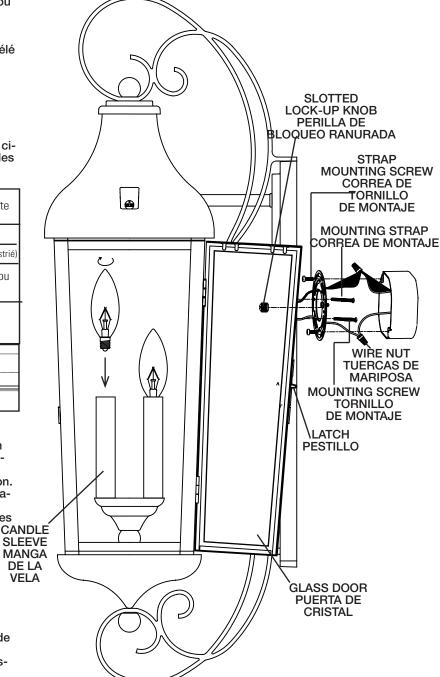

SEE OTHER SIDE FOR ENGLISH TRANSLATIONS. VOIR L'AUTRE CÔTÉ DES TRADUCTIONS EN ANGLAIS.

Date Issued: 04/13/16 IS-49738-CB