


# RONBOW

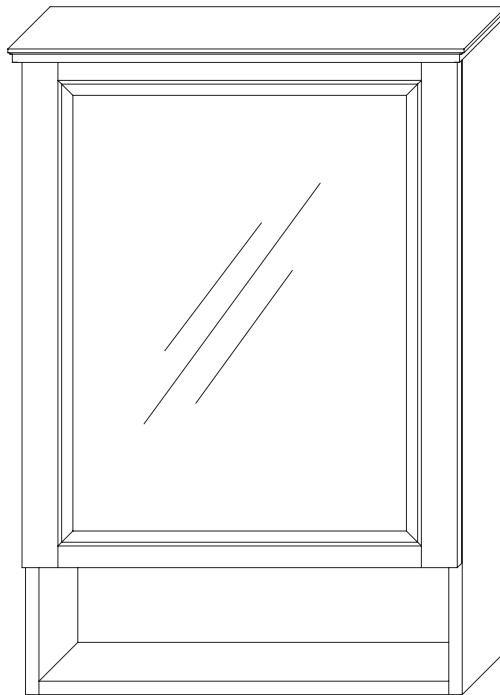

## INSTALLATION AND CARE GUIDE

WYATT WOOD MEDICINE CABINET

617124-COLOR

**Model :** 617124-COLOR

## PRE-INSTALLATION

### Tools Required




\*\* Stud Finder is needed for this item

## INSTALLATION

### Step 1:

Have the door of your medicine cabinet open. Carefully drill four holes near the four corners of your medicine cabinet.

**Figure 1.**

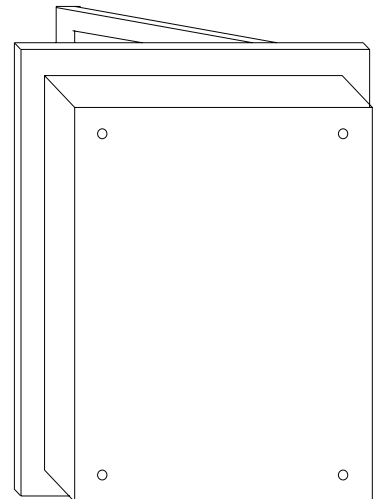

### Step 2:

With a stud finder & a level, find the stud location and position your medicine cabinet to your desired wall location. Align and drill holes into the wall that matches the drilled holes of your medicine cabinet. Secure your medicine cabinet using four Hollow Wall Anchor.

**Figure 2.**

