

CODE NUMBER

3770011

DESCRIPTION

1.28 gpf, Angle Stop Bumper, Dual-Filtered Fixed Bypass Diaphragm, Polished Chrome Finish, Single Flush, Hardwired, Sensor-Operated, Sloan® Exposed Sensor Hardwired Water Closet Flushometer.

DETAILS

Flush Volume: 1.28 gpf (4.8 Lpf)
Finish: Polished Chrome (CP)
Power Type: Hardwired (HW)

• Valve: Diaphragm

• Bypass: Dual-Filtered Fixed Bypass Diaphragm (DFB)

• Valve Body Material: Semi-red Brass

Fixture Type: Water ClosetFixture Connection: Top spud

• Rough-In Dimension: 11 1/2" (292mm)

Spud Coupling: 1 ½" (38mm)
Supply Pipe: 1" (25mm)
Bumper: Angle Stop (YO)

FEATURES

- Vacuum Breaker with Flush Connection
- Sweat Solder Adapter with Cover Tube and Cast Wall Flange
- User friendly three (3) second Flush Delay
- No External Volume Adjustment to Ensure Water Conservation
- OPTIMA® EL-1500 Self-Adaptive Infrared Sensor with Indicator Light
- I.P.S. Screwdriver Bak-Chek® Angle Stop with Vandal Resistant Stop Cap
- Courtesy Flush® Override Button
- High Chloramine Resistant PERMEX® Synthetic Rubber Diaphragm with Linear Filtered Bypass and Vortex Cleansing ActionTM
- Diaphragm, Stop Seat and Vacuum Breaker to be molded from PERMEX® rubber compound for Chloramine resistance

VIDEOS



ESS Flushometer



COMPLIANCES & CERTIFICATIONS



















(ADA Compliant, BAA Compliant, BREEAM Water Credit, CalGreen Compliant, cUPC Certified, cUPC Green Certified, Green Globes Water Credit, LEED V4 Water Efficiency Credit, UL Certified, WaterSense Listed)

RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

ELECTRICAL SPECIFICATIONS

Arming Delay: 16 secondsControl Circuit: Solid State

• Flush Delay: 3s

• Self-Adaptive Window: ±10

• Sensor Range: 22"-42" (559-1,067mm)

Transformers:03451540345999

VALVE OPERATING PRESSURE (FLOWING)

15–80 PSI (103–552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

DOWNLOADS

- Sloan Exposed Installation Instructions
- Sloan Exposed (Spanish) Installation Instructions
- Sloan/Regal 110/111/115/116/140/153/152 ESS Installation Instructions
- Sloan Exposed with TMO Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide

Sloan 10500 Seymour Ave, Franklin Park, IL 60131

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com



- Tail Piece Repair and Maintenance Guide
- Sloan Flushometer Repair and Maintenance Guide
- Optima ESS Repair and Maintenance Guide
- Sloan/Regal ESS Repair and Maintenance Guide
- Additional Downloads

NOTES


All information contained within this document subject to change without notice.

Looking for other variations of the SLOAN 111 ESS product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer.
Find a compatible water closet for this flushometer.

Watersense compliant when used with a WaterSense compliant fixture

ROUGH-IN

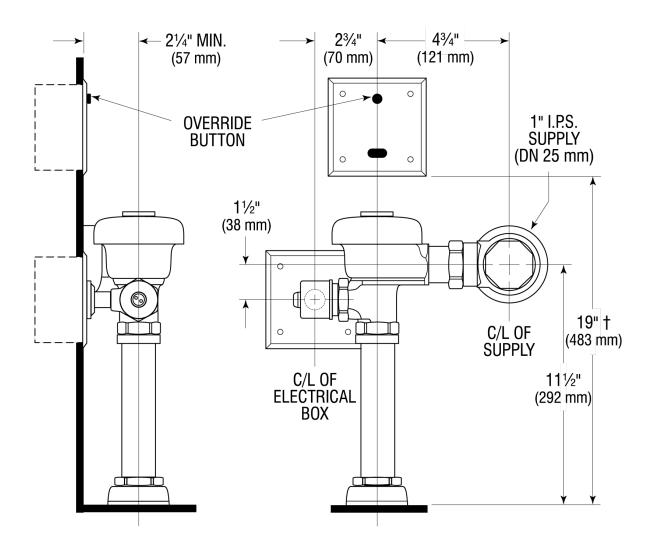

Sloan 10500 Seymour Ave, Franklin Park, IL 60131

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com